

# **EFG IZI Pro**

Assembly Instruction 039167

For more information, please visit **www.efg.info** 



Step 1 - Assembly beams and legs.

Recommended beam length for following table top length (2-column):

1600 = Beam length 1314 mm (Top extension on table according to page 5)
1800 = Beam length 1514 mm (Top extension on table according to page 5)

M8x25 (x7)
(8pcs for single stand)

x22 (optional)
(12pcs for single stand)


Wiggle the leg when mounting the crossbars. It makes it easier to mount the screws.


M8x25

Leave one of these screws unmounted in the crossbar for connection third column.

For 3-Columns go to page 3.

Step 2 - Assembly Feet and Side Bars.

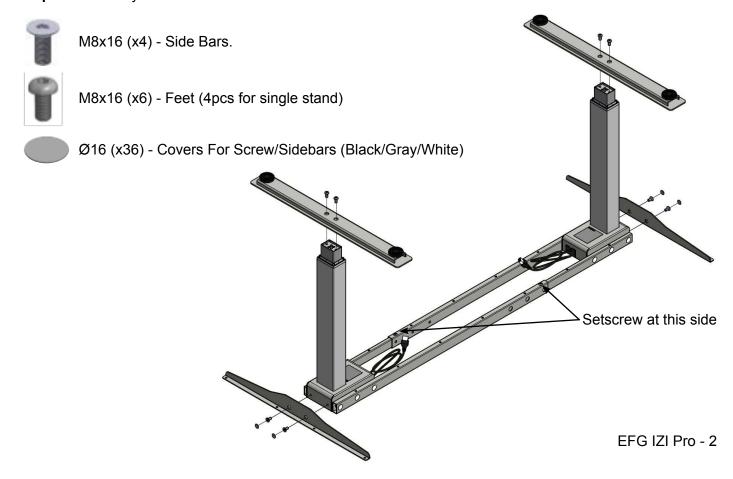

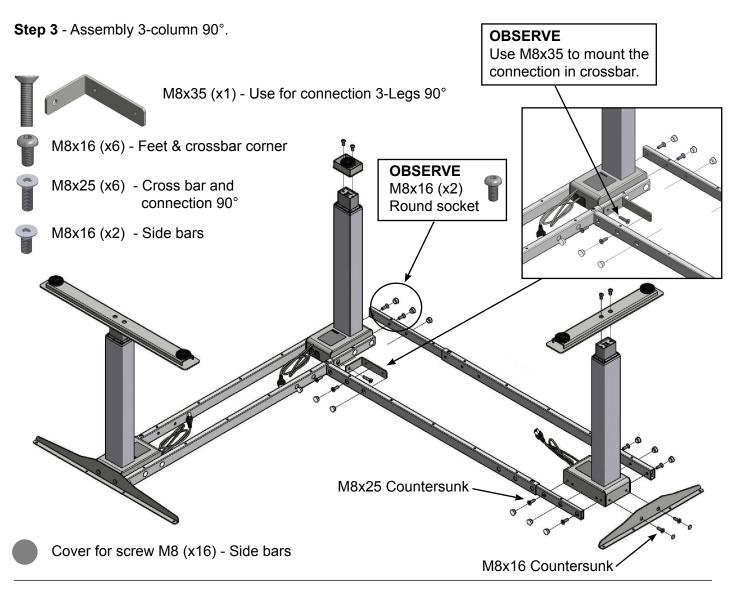


Step 4 - Mount frame to table top - 2-column.

Recommended beam length for following table top length (2-column):


**1600 =** Beam length 1314 mm (Top extension on table according to page 5)

**1800 =** Beam length 1514 mm (Top extension on table according to page 5)

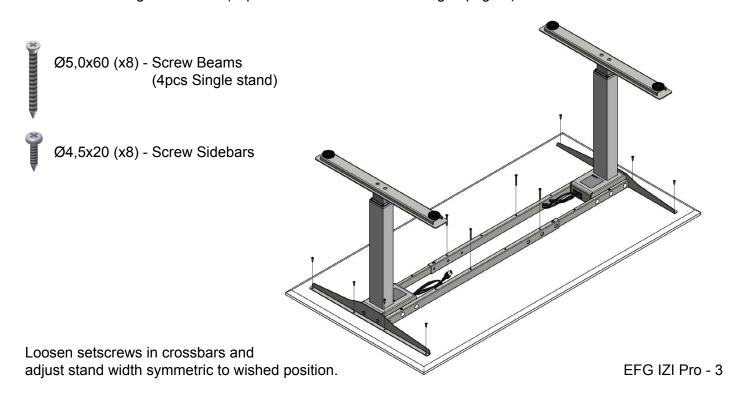


**Step 5** - Mount frame to table top - 3-column.

Loosen setscrews in crossbars and adjust stand width symmetric to wished position.

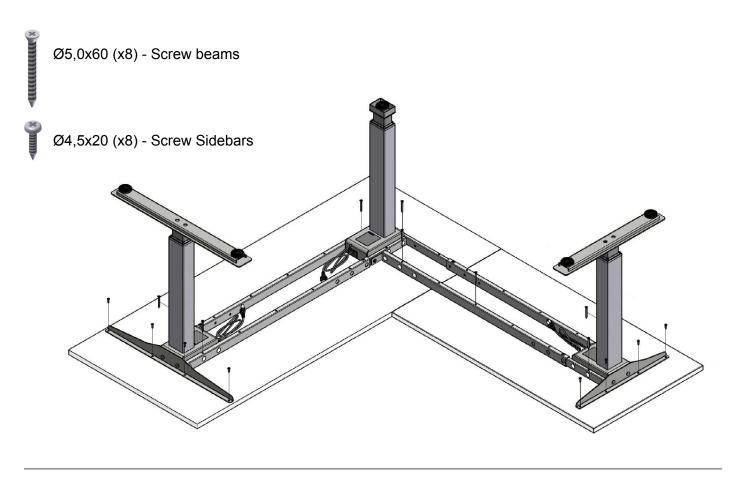

Step 6 - Cable fastening.

Structure excess cabling under the table top, use a cableclip to fasten powersupply.

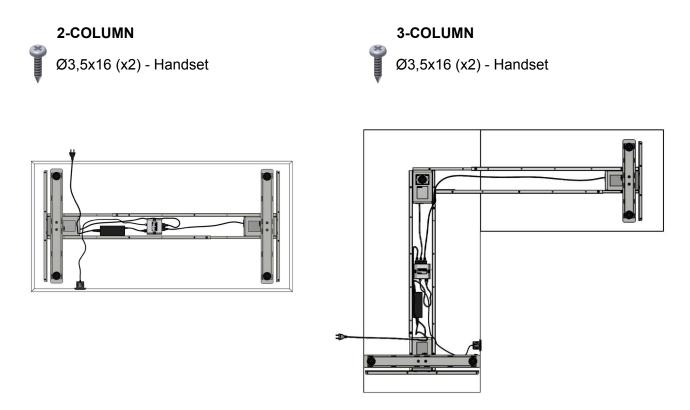

Step 7 - Observe.



INFO - Accessories (Gables) + Reset.

# **ACCESSORIES (GABLES):**

Below you can see recommended distance to table top edge on gables for enabling other acessories to be added.


# 120 mm

### **SUITED ACESSORIES:**

- TAB Screens (Ex: A29F01)
- ADD Stack (Ex: ADDSTACKK)
- Butler (Ex: ADDBUTLK)
- ScreenIT Standard (Ex: A30B81)

### **RESET:**

Below you will find the guide for reseting the desk if necessary.

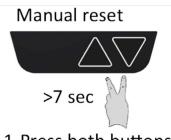


1-Press both buttons



2-Drive the columns down to lowest level 3-Ready for use



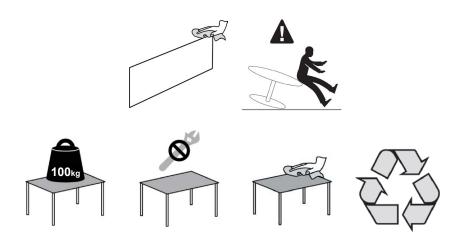

The product contains one or more of following materials: Metal, plastic, wood, fabric, foam.

## Försäkran om överensstämmelse för maskiner/ Declaration of conformity

**SE -** EFG IZI Pro överensstämmer med Maskindirektivet AFS 2008:3 och AFS 2009:5, European directive 2006/42/EG, EMC-direktiv 2004/108/EG och LVD 2014/35/EU.

**UK -** EFG IZI Pro complies with the European directive 2006/42/EG, EMC-directive 2004/108/EG and LVD 2014/35/EU.

**DK -** EFG IZI Pro er i overensstemmelse med European directive 2006/42/EG, EMC-directive 2004/108/EG og LVD 2014/35/EU.